Slim Tuner Board

Tuning Procedure

The slim tuner board has four jumpers on the end of the board marked S1 through S4.

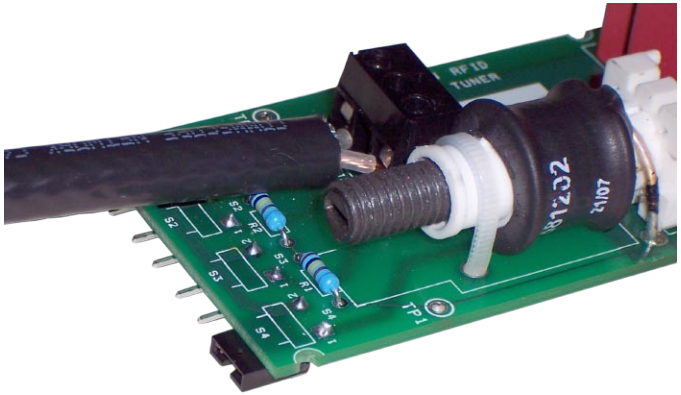

Unscrew the fine tuning adjustment until it is out about 1/3” or to the white outline on the circuit board.

Insert jumper S4 and remove all others.

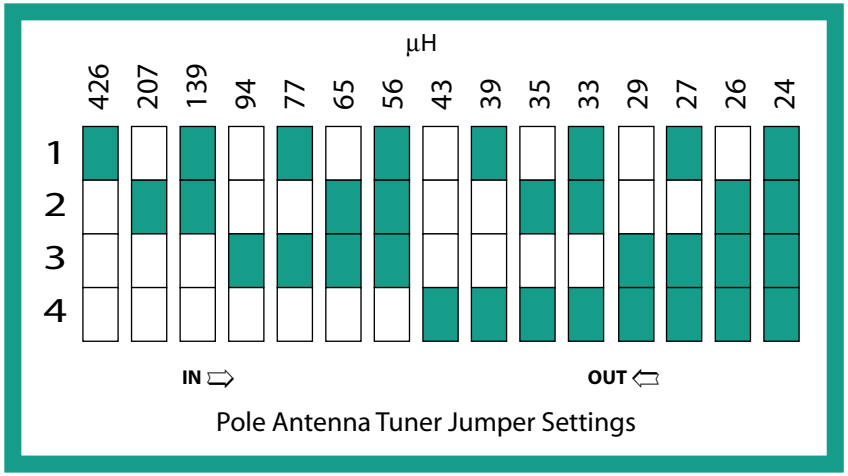

Pole Antenna Tuner Jumper Settings

Connect the tuning indicator and turn the reader on. Note which light is on then turn the reader off.

If the IN light was on, leave jumper S4 in. If the OUT light was on remove it.

Do the same test for S3, S2 and S1, powering off in between to insert and remove jumpers.

After all jumpers have been set, turn the fine tuning adjustment in (clockwise) until the green OK light turns on.

It is possible to build antennas that won’t tune. Contact Oregon RFID technical support for help.

Oregon RFID

11/2008 (c) 2008 Oregon RFID